




# Taurus Series

## Multimedia Players

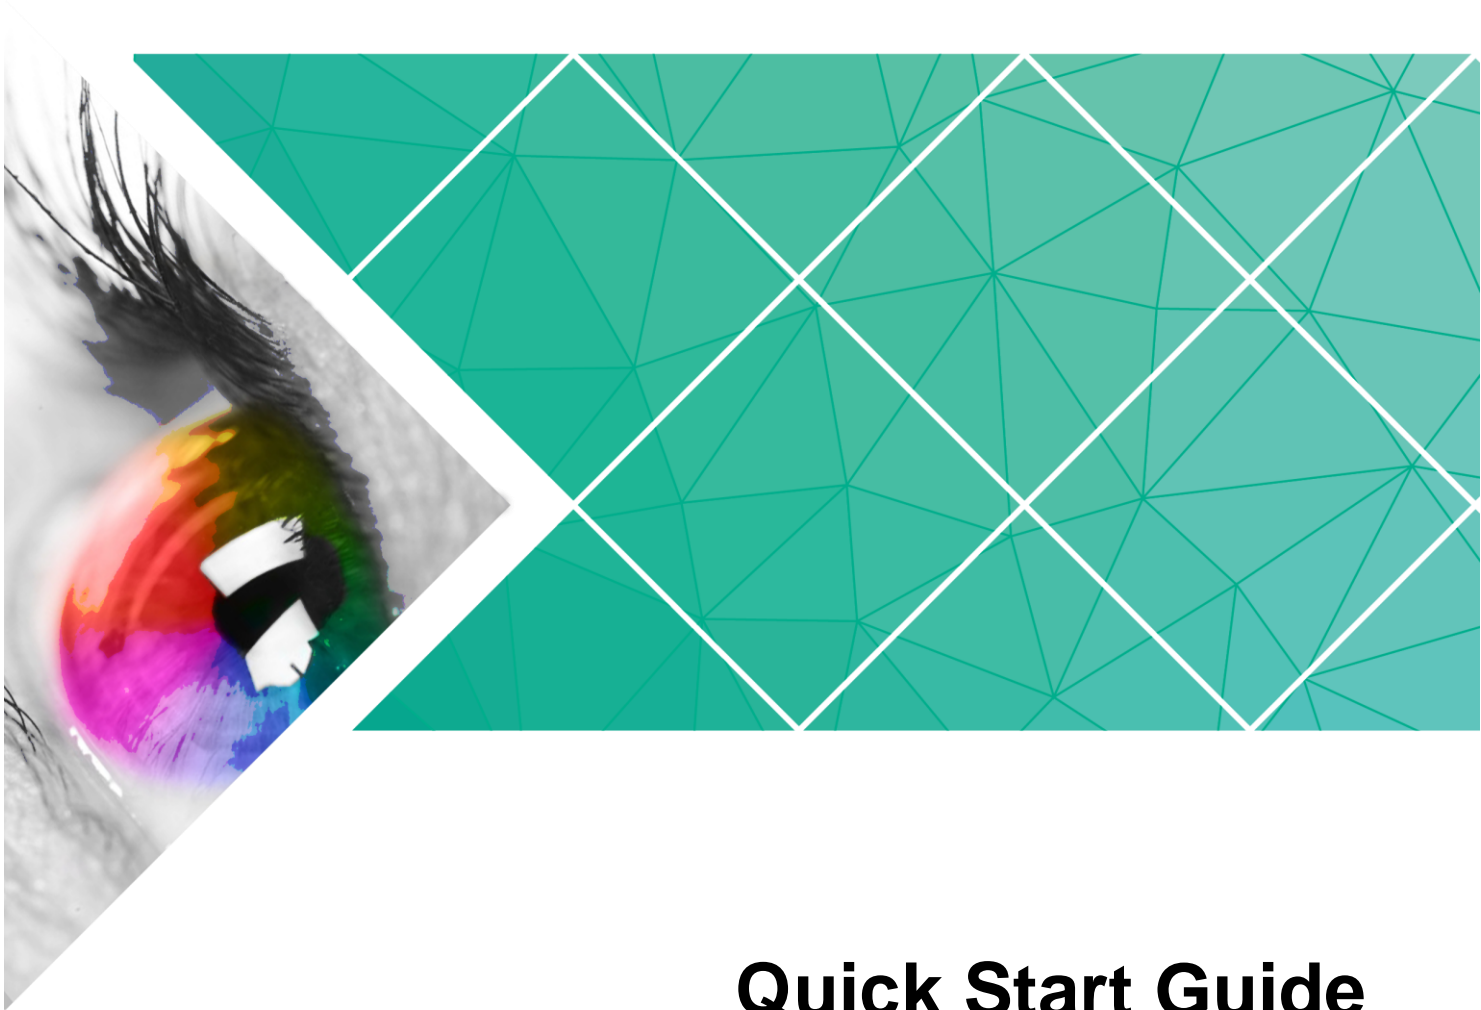

## Quick Start Guide

---

Version: V1.0.0

Doc. ID: NS120100144

# Change History

Version	Release Date	Description
V1.0.0	2017-07-20	First release.

---

# Table of Contents

---


<b>Change History .....</b>	<b>i</b>
<b>Table of Contents.....</b>	<b>i</b>
<b>1 Overview .....</b>	<b>1</b>
1.1 Scenario.....	1
1.2 Procedures .....	1
<b>2 Preparation.....</b>	<b>2</b>
2.1 Getting and Installing Software.....	2
2.2 Getting Documents .....	3
2.3 Getting Required Account Information .....	3
<b>3 Taurus Connections .....</b>	<b>4</b>
3.1 Connecting via Ethernet Cable .....	4
3.2 Connecting via Local Area Network (LAN) .....	4
3.3 Connecting via Wi-Fi.....	5
3.3.1 Wi-Fi AP Mode.....	5
3.3.2 WiFi Sta Mode .....	6
3.3.3 WiFi AP+Sta Mode .....	6
<b>4 Receiving Card Parameter Configuration.....</b>	<b>8</b>
4.1 Loading Configuration File or Configuring the Parameters Manually Through NovaLCT-Taurus .....	8
4.2 Loading the Configuration File Through ViPlex Handy .....	9
<b>5 Screen Configuration .....</b>	<b>10</b>
5.1 Configuring a Screen Through ViPlex Handy.....	10
<b>6 General Operations.....</b>	<b>11</b>
6.1 Taurus Login with ViPlex Handy (Android and iOS).....	11
6.2 Taurus Login with ViPlex Express (Windows).....	11

# 1 Overview

## 1.1 Scenario


This document introduces a quick way to use Taurus series multimedia players and provides instructions for the first-timer.

## 1.2 Procedures

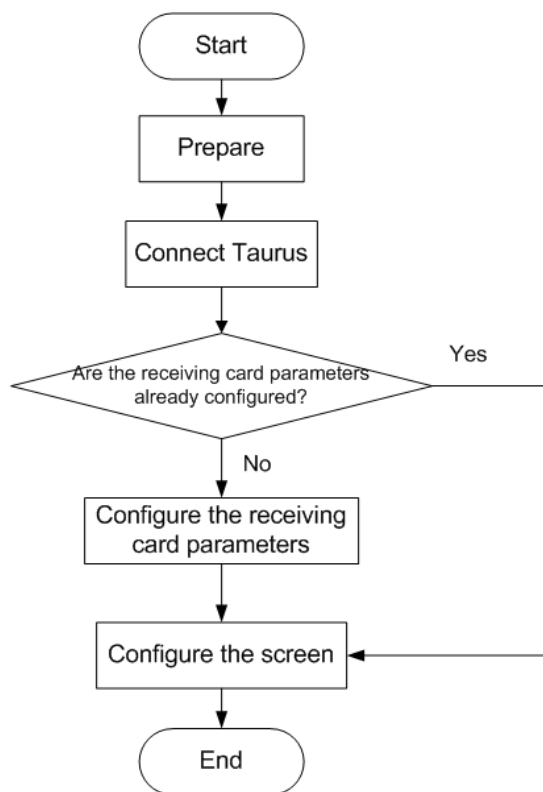

## 2 Preparation

### 2.1 Getting and Installing Software

Item	Description	How to get	How to install
ViPlex Handy	It is a LAN-based display management software, including the one applicable to Android and iOS operating systems, is mainly used for display management as well as solution editing and publishing.	Scan the following OR code to download and install the APP.  Use the App Store on your iPhone to get ViPlex Handy for iOS.	Software installation is the same as other applications.
ViPlex Express	It is a LAN-based display management software applicable to the Windows operating system, and is mainly used for display management as well as solution editing and publishing.	Visit <a href="http://www.novastar.tech">www.novastar.tech</a> , download and install the required software.	
NovaLCT-Taurus	Screen configuration software, which only supports Windows and is mainly used for adjusting screens to the optimal display status.	Visit <a href="http://www.novastar.tech">www.novastar.tech</a> , download and install the required software.	

## 2.2 Getting Documents

Item	Description	How to get
<i>Taurus Series Multimedia Players Product Description-V1.0.0</i>	Describing application scenarios, features, safety instructions, hardware structure, software structure and specifications of Taurus series products.	Visit <a href="http://www.novastar.tech">www.novastar.tech</a> to download the required documents.

## 2.3 Getting Required Account Information

Item	Account Name	Default Password
Connect Taurus WiFi AP	AP+ <i>last 8 digits of the SN</i> , For example: AP10000033	12345678
Log into the Taurus	admin	123456

# 3 Taurus Connections

In this chapter, the picture of T6 is taken as an example to introduce the Taurus series products.

## 3.1 Connecting via Ethernet Cable

### Network Diagram

Users can access the Taurus directly when it is connected via the Ethernet cable.



### Configuration

Step 1 Refer to “[6 General Operations](#)” to log in to the Taurus.


Step 2 Turn off DHCP and set static IP address for the Taurus.

- ViPlex Handy: Select **Network Setting, Wired Network Setting** in the **Screen management** page.
- ViPlex Express: Select **Screen Control, Network configuration**.

## 3.2 Connecting via Local Area Network (LAN)

### Network Diagram

Users can access the Taurus through LAN when it is connected via LAN.

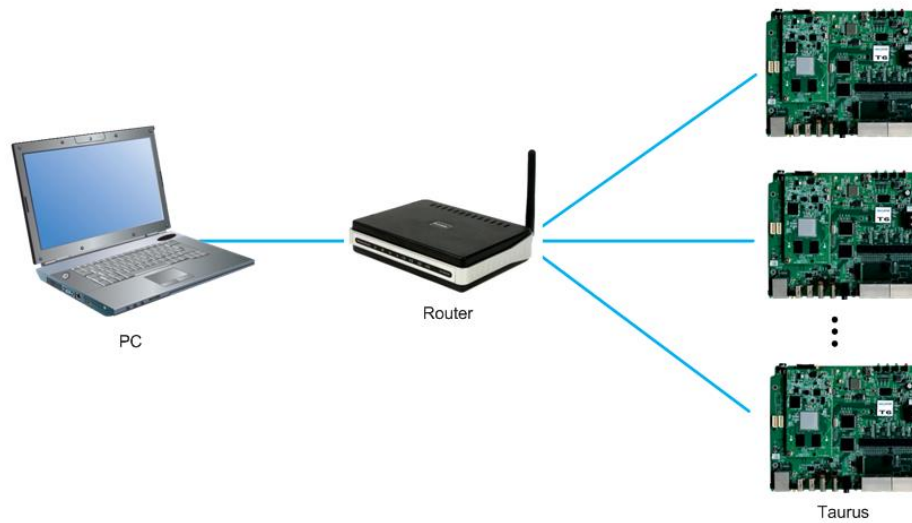

## Configuration

No need for configuration.


## 3.3 Connecting via Wi-Fi

The Taurus series products have dual WiFi function which can provide Wi-Fi hotspot as well as serve as WiFi Station at the same time.

### 3.3.1 Wi-Fi AP Mode

#### Network Diagram

Users can access the Taurus directly when it is connected via WiFi AP.

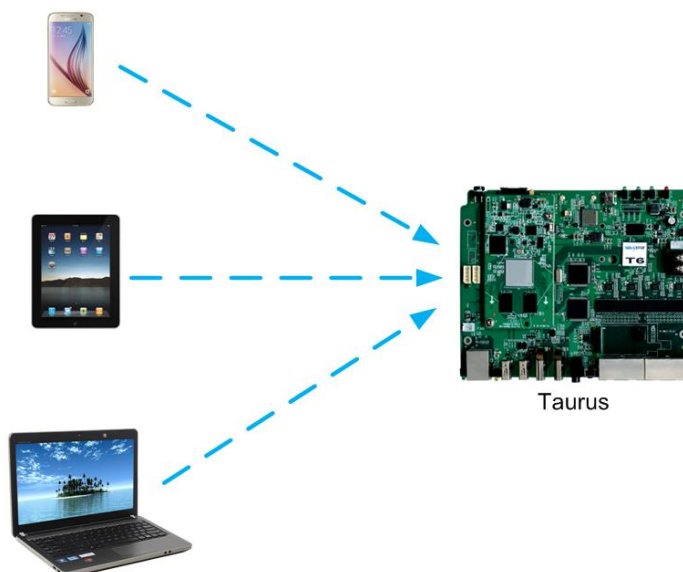



## Configuration

No need for configuration. Please connect the WiFi AP of the Taurus. SSID is “AP + last 8 digits of the SN”, for example, “AP10000033”.

### 3.3.2 WiFi Sta Mode

#### Network Diagram

Users can access Taurus through external router when it is connected via WiFi Sta.



## Configuration

Step 1 Refer to “[6 General Operations](#)” to log in to the Taurus.


Step 2 Turn on Wi-Fi Sta mode. Click the Wi-Fi name of the external router and then enter the password of the Wi-Fi.

- ViPlex Handy: Select **Network Setting, WiFi Setting** in the **Screen management** page.
- ViPlex Express: Select **Screen Control, Network configuration**.

### 3.3.3 WiFi AP+Sta Mode

#### Network Diagram

By using WiFi AP+Sta connection, users can directly access the Taurus or access the Internet through bridging connection.

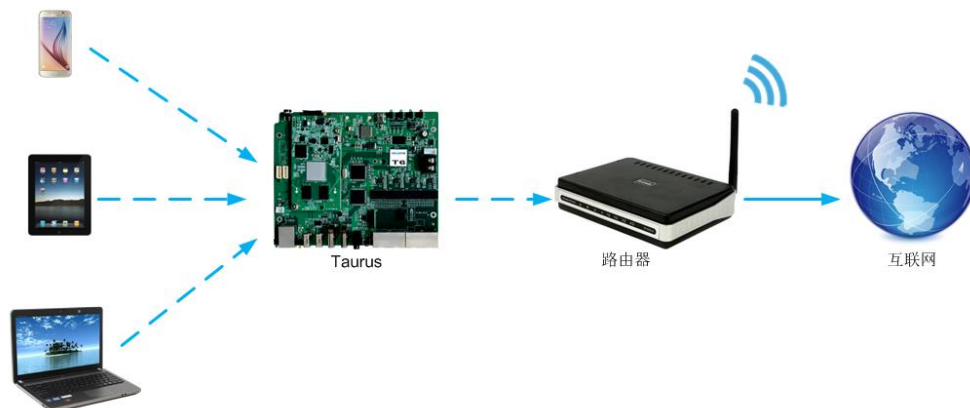

## Configuration

Step 1 Refer to “[6 General Operations](#)” to log in to the Taurus.

Step 2 Turn on Wi-Fi Sta mode. Click the Wi-Fi name of the external router and then enter the password of the Wi-Fi.

- ViPlex Handy: Select **Network Setting, WiFi Setting** in the **Screen management** page.
- ViPlex Express: Select **Screen Control, Network configuration**.

## Related Information

The Taurus can be connected to the Internet through following three ways. The priority order of the three ways is from high to low.

- Wired network
- WiFi Sta
- 4G network


Models of the Taurus must have 4G module while using 4G network. Users can enter following relevant menus to turn on the mobile network:

- ViPlex Handy: Select **Network Setting, Mobile Data Setting** in the **Screen management** page.
- ViPlex Express: Select **Screen Control, Network configuration**.

# 4 Receiving Card Parameter Configuration

If receiving card parameters are already configured, please skip this chapter and perform the operations in “[5 Screen Configuration](#)”.

## 4.1 Loading Configuration File or Configuring the Parameters Manually Through NovaLCT-Taurus

- Step 1 Start NovaLCT-Taurus.
- Step 2 Select **System, Search All Display**.  
System will display the screen information list.
- Step 3 Click screen information and click **Connect System**.  
The gray button on the page will become normal.
- Step 4 Select **User, Advanced login**.
- Step 5 Enter password and click **Login**.  
Default password is “admin”.
- Step 6 Click  to enter the **Screen Config** page.
- Step 7 Confirm whether the local PC has the required receiving card configuration file.
- Yes. Please perform **Load Configuration File**.
  - No. Please perform **Manual Configuration**.

### Loading Configuration File

- Step 1 Select **Cascading scan board** and **Load Configuration File**. Click **Browse** to choose a configuration file from the local PC.
- Step 2 Click **Next** to load the configuration file.

### Manual Configuration

- Step 1 Select **Cascading scan board** and click **Next**.
- Step 2 Configure receiving card parameters based on actual conditions.

- Step 3 Click **Send To HW**.
- Step 4 Set parameters based on actual conditions and click **Send**.
- Step 5 Adjust parameters until the screen displays normally and then click **Save to Screen**.
- Step 6 (Optional) Click **Save Config File** to back up the receiving card configuration file to the local PC.

## 4.2 Loading the Configuration File Through ViPlex Handy

- Step 1 Save the receiving card configuration file to mobile phone.
- Step 2 Refer to “[6 General Operations](#)” to log in to the Taurus.
- Step 3 Click screen name to enter the **Screen management** page.
- Step 4 Select **Screen Setting, Receiving card configuration** to enter the **Receiving card configuration** page.
- Step 5 Select the receiving card configuration file and click **Send**.

# 5 Screen Configuration

---

## 5.1 Configuring a Screen Through ViPlex Handy

- Step 1 Refer to “[6 General Operations](#)” to log in to the Taurus.
- Step 2 Click screen name to enter the **Screen management** page.
- Step 3 Select **Screen Setting, Screen configuration** to enter the **Screen configuration** page.
- Step 4 Configure screen information based on actual conditions and click **OK**.

# 6 General Operations

## 6.1 Taurus Login with ViPlex Handy (Android and iOS)

### Before You Begin

- Acquire the SSID and password of Wi-Fi AP of Taurus series products. SSID is default to be composed of AP and the last 8 numbers of SN, and the password is default as “**12345678**”.
- Acquire the login password of user “admin” of which the default password is “**123456**”.




### Operating Procedures

ViPlex Handy can connect numerous Taurus series products.

Step 1 Connect Wi-Fi AP of the Taurus series products.

Step 2 Start ViPlex Handy.

System can automatically detect the Taurus series products and refresh **Screen list**. Users can also slide down **Screen list** to manually refresh the list.

- : denotes that Taurus is online and you can log into it.
- : denotes that Taurus is offline and you cannot log into it.
- : denotes that Taurus login is successful.

Step 3 Click **Connect** next to the screen name.

Step 4 Enter the user name and password and click **Login**.

## 6.2 Taurus Login with ViPlex Express (Windows)

### Before You Begin

- Acquire the SSID and password of Wi-Fi AP of Taurus series products. SSID is default to be composed of AP and the last 8 numbers of SN, and the password is default as “**12345678**”.
- Acquire the login password of user “admin” of which the default password is “**123456**”.




## Operating Procedures

ViPlex Express can connect numerous Taurus series products.

Step 1 Connect Wi-Fi AP of the Taurus series products.



Step 2 Start the ViPlex Express.

Step 3 Click **Refresh** and the screen list will be displayed on the page.

- : denotes that Taurus is online and you can log into it.
- : denotes that Taurus is offline and you cannot log into it.
- : denotes that Taurus login is successful.

After the Taurus is found by ViPlex Express, the ViPlex express will try to log into to the Taurus with the default account or the account used for last login.

Step 4 Taurus login is successful or not.

- Yes.  appears and no further operation is required.
- No.  appears and then perform Step 5.

Step 5 Click **Connect** on the right of the screen information.

Step 6 Enter the username and password, and click **OK**.